



3-polne, preklopne, s standardnim pokrovom priključkov

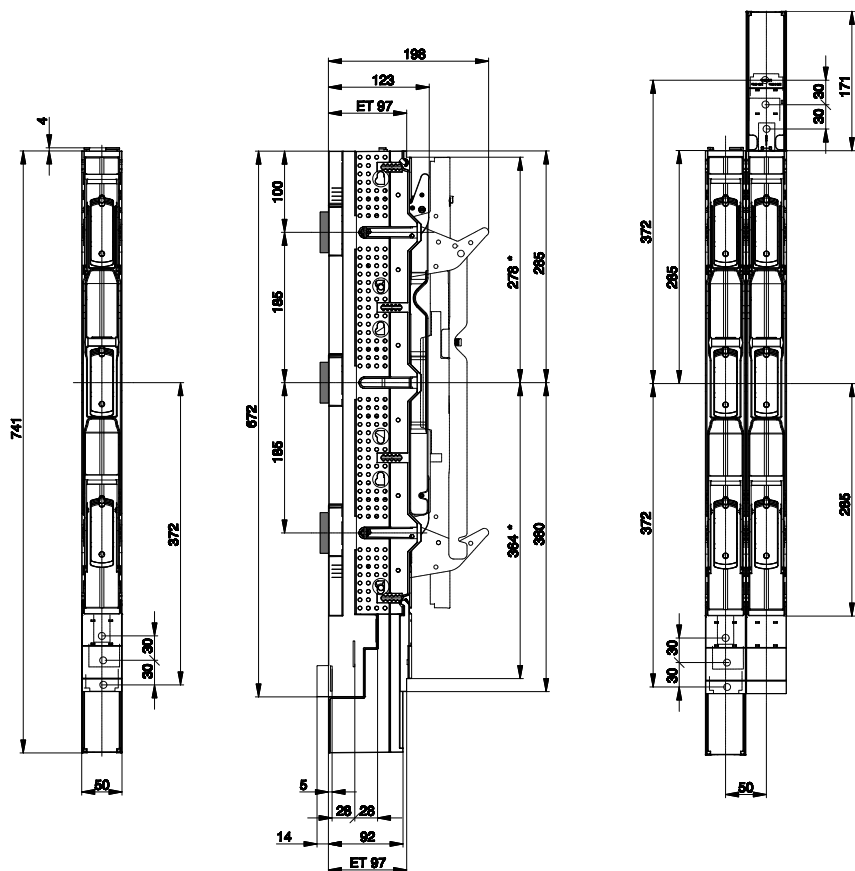

Parkirni položaji

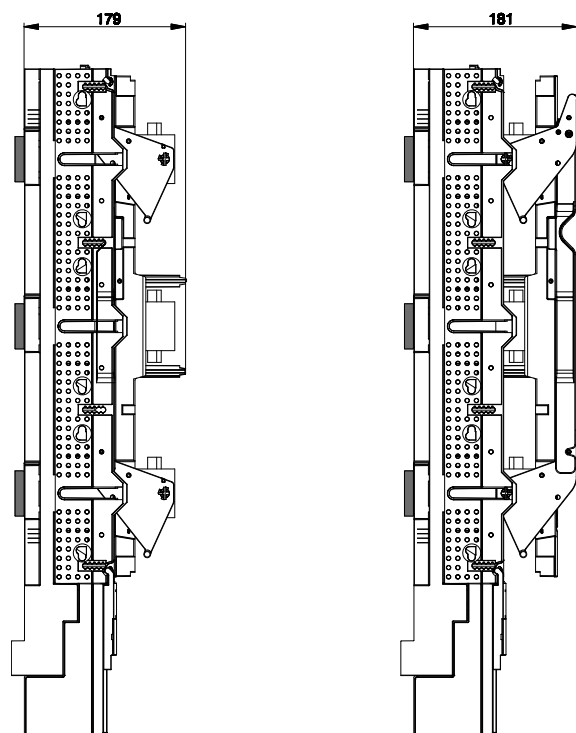

Mera izreza pri ET 97 = * mera + 1 mm
ET = globina vgradnje pokrova